

WARRANTY

Our company warrants all the parts except for wooden sections for a period of 2 year.

Maintenance and repair periods during warranty period will be added to the warranty period.

The failures within 2 year from the initial sale date will be repaired by our company free of charge.

This warranty will be valid if the customer performs his/her obligations completely according to the user's guide.

Any failure arisen from misuse or improper use is not covered by this warranty.

If any product repeats the same failure twice within warranty period or if its repair is not possible based on a report by our service, it will be replaced.

Yıldız, produces quality with the image of “reliable trademark”. Also, it is one of today's and future's leading establishments of Arms Industry. It serves everybody who like hunting, the nature, the crafts and sports with its large production range, by use of the ultimate possibilities of labor and technology.

It has an understanding of giving priority to the principle of total quality and standardization of parts in production, to provide the best services, warranties and price stability in marketing with the highest comprehension of responsibility.

Congratulations! You have one of our high quality guns.

The barrel and firing group are found detached in the case.



Picture for a superposed (over and under) double-barrel

ASSEMBLING THE BARREL

- Remove the stock by pulling the latch.
- Push the folding latch to the right.
- Attach the stock first to the receiver and then to the barrel properly and then press it strongly.



Now your gun is ready to operate.

SAFETY

- The safety button is directly incorporated into the trigger and it is located on the breech-top of the receiver.
- You can easily use it by your thumb. You should see the mark “S” in front of the safety button in order to be sure that the shotgun is in safety mode.
- You can fire the upper or the lower cartridge first, as you may wish. If you turn the selector switch to the right, you will fire the first shot through the lower barrel and the second shot through the upper barrel.
- If you turn the selector to the left, you will fire the first shot through the upper barrel and the second shot through the lower barrel.
- The upper barrel is generally used in narrow spaces while the lower barrel is used in broad spaces.



LOADING THE SHOTGUN

Do not load your shotgun indoors.

Put the shotgun in safety mode.

Place the cartridges in the chambers and unfold the shotgun.

Your gun is ready to fire.

In mobile choke models, choke tubes at the muzzle are detachable by a wrench.

Lines on choke tubes show choke sizes. One line is the narrowest choke. Choke sizes enlarge as the number of lines increases

| TS 870 | PATTERN | MARK | BEST IN THE AREA OF / KULLANIM ALANLARI |
|----------|--------------|------|---|
| 4/4 | * FULL | ○ | Duck, Goose etc. hunting from long distance / Kaz, ördek gibi uzun menzilli avlarda |
| 3/4 | ** IMP MOD | ○ | Partridge, Rabbit etc. hunting / Keklik, tavşan gibi avlarda |
| 2/4 | *** MOD | ○ | Woodcock, pheasant, quail, partridge etc. hunting / Çulluk, sülün, bıldırcın, keklik ve benzeri avlarda |
| 1/4 | **** IMP CYL | ○ | Quail, turtledove etc. hunting from short distance / Bıldırcın ve üveyik gibi kısa menzilli avlarda |
| Cylinder | ***** CYL | ○ | Shooting for short distance and using slug shots / Kısa mesafeli atışlar ve kurşun atmak için |



General Safety Rules:

- 1) Keep your shotgun empty unless you require to load it.
- 2) Do not trigger your shotgun when it is empty.
- 3) Put your shotgun in safety mode when you load it.
- 4) Do not aim your shotgun at living beings and residential areas when you load it. Do not load your shotgun indoors.
- 5) Do not leave your shotgun in any place, when it is loaded.
- 6) If you quit firing after you load your gun, unload the cartridges carefully.



DISMANTLING THE SHOTGUN

Detach the stock from the barrel by pulling the latch.

Detach the barrel from the firing assembly by turning the folding latch to the right. Attach the stock to the barrel. Place the shotgun in its case after maintenance and cleaning.



MAINTENANCE AND CLEANING RULES:

Lubricate inside the barrel by a ramrod with a piece of cloth impregnated with sufficient amount of gun lubricant and then clean it properly.

Dry inside the barrel with a clean piece of cloth. Ensure that no foreign substances are left inside the barrel.

Detach and clean choke tubes, if your gun has mobile chokes.

Lubricate the surface of the barrel and other parts with the same gun lubricant and then dry them properly.

Keep your gun away from dust, wet and acid.

